


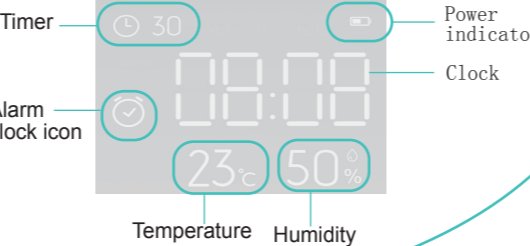


折页说明书
尺寸: 110*90MM
材质: 128G铜版纸

<p align="center">Warranty Card</p> <p>Username _____</p> <p>Address _____</p> <p>Mail _____</p> <p>Maintenance reason _____</p> <p>Thank you for purchasing this product, this machine has an 18-month warranty. Please contact the sales team with any questions.</p>	<p align="center">Fault self-check</p> <p>Alarm not working:</p> <ol style="list-style-type: none"> 1. Check if the alarm is on 2. Check if the clock setting is correct 3. Check if the alarm setting is correct <p>No sound:</p> <p>Check to see if the sound is paused, or is too low</p> <p>Not working:</p> <p>Check if the Battery is charged or if the timer is finished</p> <p>No lights:</p> <ol style="list-style-type: none"> 1. Check if the machine has power 2. Whether the light button is on 	<table border="1"> <thead> <tr> <th>Nature Sound</th> <th>White noise</th> <th>Soothing sound</th> </tr> </thead> <tbody> <tr><td>1. Frog</td><td>1. Wind 1</td><td>1. Piano 1</td></tr> <tr><td>2. Summer Night</td><td>2. Wind 2</td><td>2. Piano 2</td></tr> <tr><td>3. Crickets</td><td>3. White Noise 1</td><td>3. 7Hz Alpha</td></tr> <tr><td>4. Birds</td><td>4. Wind 3</td><td>4. Lullaby 1</td></tr> <tr><td>5. Sea wave</td><td>5. White Noise 2</td><td>5. Lullaby 2</td></tr> <tr><td>6. Ocean</td><td>6. Sleep noise</td><td>6. Lullaby 3</td></tr> <tr><td>7. Rain 1</td><td>7. Brown noise</td><td>7. Alpha</td></tr> <tr><td>8. Thunderstorm</td><td>8. Pink noise 1</td><td></td></tr> <tr><td>9. Rain 2</td><td>9. Pink noise 2</td><td></td></tr> <tr><td>10. Brook</td><td></td><td></td></tr> <tr><td>11. Fireplace</td><td></td><td></td></tr> <tr><td>12. Bonfire</td><td></td><td></td></tr> <tr><td>13. Heartbeat</td><td></td><td></td></tr> <tr><td>14. Fan noise 1</td><td></td><td></td></tr> <tr><td>15. Fan noise 2</td><td></td><td></td></tr> <tr><td>16. Pendulum</td><td></td><td></td></tr> <tr><td>17. Fan noise 3</td><td></td><td></td></tr> <tr><td>18. Washing noise</td><td></td><td></td></tr> <tr><td>19. Shusher</td><td></td><td></td></tr> </tbody> </table>	Nature Sound	White noise	Soothing sound	1. Frog	1. Wind 1	1. Piano 1	2. Summer Night	2. Wind 2	2. Piano 2	3. Crickets	3. White Noise 1	3. 7Hz Alpha	4. Birds	4. Wind 3	4. Lullaby 1	5. Sea wave	5. White Noise 2	5. Lullaby 2	6. Ocean	6. Sleep noise	6. Lullaby 3	7. Rain 1	7. Brown noise	7. Alpha	8. Thunderstorm	8. Pink noise 1		9. Rain 2	9. Pink noise 2		10. Brook			11. Fireplace			12. Bonfire			13. Heartbeat			14. Fan noise 1			15. Fan noise 2			16. Pendulum			17. Fan noise 3			18. Washing noise			19. Shusher			<p>Attention</p> <ol style="list-style-type: none"> 1. The product can not be placed in the rain or wet place, please keep it dry. 2. The product should be kept away from sources of ignition 3. Do not place heavy objects on the product. 4. The unit should be cleaned regularly with a soft, dry cloth. Do not use any liquids or sprays (including solvents, chemicals or alcohol). <p>Warn Tips</p> <ol style="list-style-type: none"> 1. Charge with original USB cable. 2. Kids need to use the machine under adult supervision. 	<table border="0"> <tr> <td>19 Nature sounds 9 White noise 7 Soothing sound</td> <td>4 Timers 30/60/90/120min</td> </tr> <tr> <td>20 Volume levels</td> <td>Indoor thermometer</td> </tr> <tr> <td>7 Breathing night lights</td> <td>Indoor hygrometer</td> </tr> <tr> <td>Alarm on 2 Alarm modes Workday (Mon-Fri) & Everyday</td> <td>Memory function</td> </tr> <tr> <td>Clock on</td> <td></td> </tr> </table> <p align="center">Technical Specification</p> <table border="0"> <tr> <td>Rated Voltage: 5V</td> <td>Max.Current: 300 mA</td> </tr> <tr> <td>Rate Current: 1A</td> <td>Output power: 2W</td> </tr> </table>	19 Nature sounds 9 White noise 7 Soothing sound	4 Timers 30/60/90/120min	20 Volume levels	Indoor thermometer	7 Breathing night lights	Indoor hygrometer	Alarm on 2 Alarm modes Workday (Mon-Fri) & Everyday	Memory function	Clock on		Rated Voltage: 5V	Max.Current: 300 mA	Rate Current: 1A	Output power: 2W	<p align="center">User Manual</p> <p align="center">White noise machine</p>  <p align="center">Machine *1 USB cable *1 User manual *1</p>
Nature Sound	White noise	Soothing sound																																																																													
1. Frog	1. Wind 1	1. Piano 1																																																																													
2. Summer Night	2. Wind 2	2. Piano 2																																																																													
3. Crickets	3. White Noise 1	3. 7Hz Alpha																																																																													
4. Birds	4. Wind 3	4. Lullaby 1																																																																													
5. Sea wave	5. White Noise 2	5. Lullaby 2																																																																													
6. Ocean	6. Sleep noise	6. Lullaby 3																																																																													
7. Rain 1	7. Brown noise	7. Alpha																																																																													
8. Thunderstorm	8. Pink noise 1																																																																														
9. Rain 2	9. Pink noise 2																																																																														
10. Brook																																																																															
11. Fireplace																																																																															
12. Bonfire																																																																															
13. Heartbeat																																																																															
14. Fan noise 1																																																																															
15. Fan noise 2																																																																															
16. Pendulum																																																																															
17. Fan noise 3																																																																															
18. Washing noise																																																																															
19. Shusher																																																																															
19 Nature sounds 9 White noise 7 Soothing sound	4 Timers 30/60/90/120min																																																																														
20 Volume levels	Indoor thermometer																																																																														
7 Breathing night lights	Indoor hygrometer																																																																														
Alarm on 2 Alarm modes Workday (Mon-Fri) & Everyday	Memory function																																																																														
Clock on																																																																															
Rated Voltage: 5V	Max.Current: 300 mA																																																																														
Rate Current: 1A	Output power: 2W																																																																														

 <p>1 Power button Press and hold for 2 seconds to turn on/off. Click the power button to adjust the screen brightness: 0%, 20%, 50%, 100% .</p> <p>2 Hook Easy to carry and hang.</p> <p>3 USB Please use the original data cable to charge.</p> <p>4 Light switch/color Switch 7-colors</p>	 <p>5 Light brightness Switch 6 levels of brightness</p> <p>6 Breathing light Two breathing rhythms. Loop every 6S/8S</p> <p>7 Alarm clock When the alarm sounds, click to turn on snooze, it will sound again after 9 minutes long press for three seconds to turn off the alarm for the day. When the alarm does not go off, click to view the alarm time Note: Turning off the alarm completely requires entering the setting program.</p>	 <p>8 White Noise (9 types) Click to play next sound; Long press for 3 seconds to pause the sound, click the button again to start the sound playback.</p> <p>9 Nature Sounds (19 types) Click to play next sound; Long press for 3 seconds to pause the sound, click the button again to start the sound playback.</p> <p>10 Soothing sound (7 types) Click to play next sound; Long press for 3 seconds to pause the sound, click the button again to start the sound playback.</p>	<p>11 Vol+: Click to increase the volume. When setting the time or alarm, use this button to switch between programming and adjusting numbers.</p> <p>12 Vol-: Click to decrease the volume. When setting the time or alarm, use this button to switch between programming and adjusting numbers.</p>	<p>13 Timer/Setting button (clock / alarm / Switch F / C) Click the button to start the timer: 30, 60, 90, 120min, off timer Press and hold the Setting button for three seconds to open the setting program: 1."Clock Settings" 2."Alarm Settings" 3."Switch F / C " Use the +/- buttons to switch the setting function. Click the Setting button to confirm and proceed to the next step.</p>	<p>alarm setting Long press [button] 3S Click the + button Click the [confirm] button confirm +/- buttons to adjust the alarm on/off Click the [confirm] button +/- to select Mode: Weekday (Mon-Fri) / Everyday Click the [confirm] button +/- to select hour Click the [confirm] button +/- to select mins Click the [confirm] button +/- to select rings Click the [confirm] button Complete Setting</p> <p>clock setting Long press [button] 3S Click the [confirm] button confirm +/- buttons to Select Year Click the [confirm] button +/- to select Month Click the [confirm] button +/- to select date Click the [confirm] button +/- to select 12H/24H Click the [confirm] button +/- to select hour Click the [confirm] button +/- to select mins Click the [confirm] button Complete Setting</p> <p>Switch F / C Long press [button] 3S Click the - button Click the [confirm] button confirm +/- buttons to Switch F / C Click the [confirm] button Complete Setting</p>
--	--	---	---	---	---